

ZEEnit 700

Service Manual/ Service Handbuch
Circuit diagrams/ Schaltpläne

Version 1.6


Part 1




Contents

1	AAS controller_analog channel_148_140_25	3
2	AAS Controller_Connection Diagram	4
3	AAS controller_CPU_148_140_25	5
4	AAS controller_interface_148_140_25	6
5	AAS controller_lamp control_148_140_25	7
6	AAS controller_modulator-connectors_148_140_25	8
7	AAS controller_transverter_148_140_25	9
8	EA controller_circuit diagram_sheet1_158_065_25	10
9	EA controller_circuit diagram_sheet2_158_065_25	11


1 AAS controller_analog channel_148_140_25

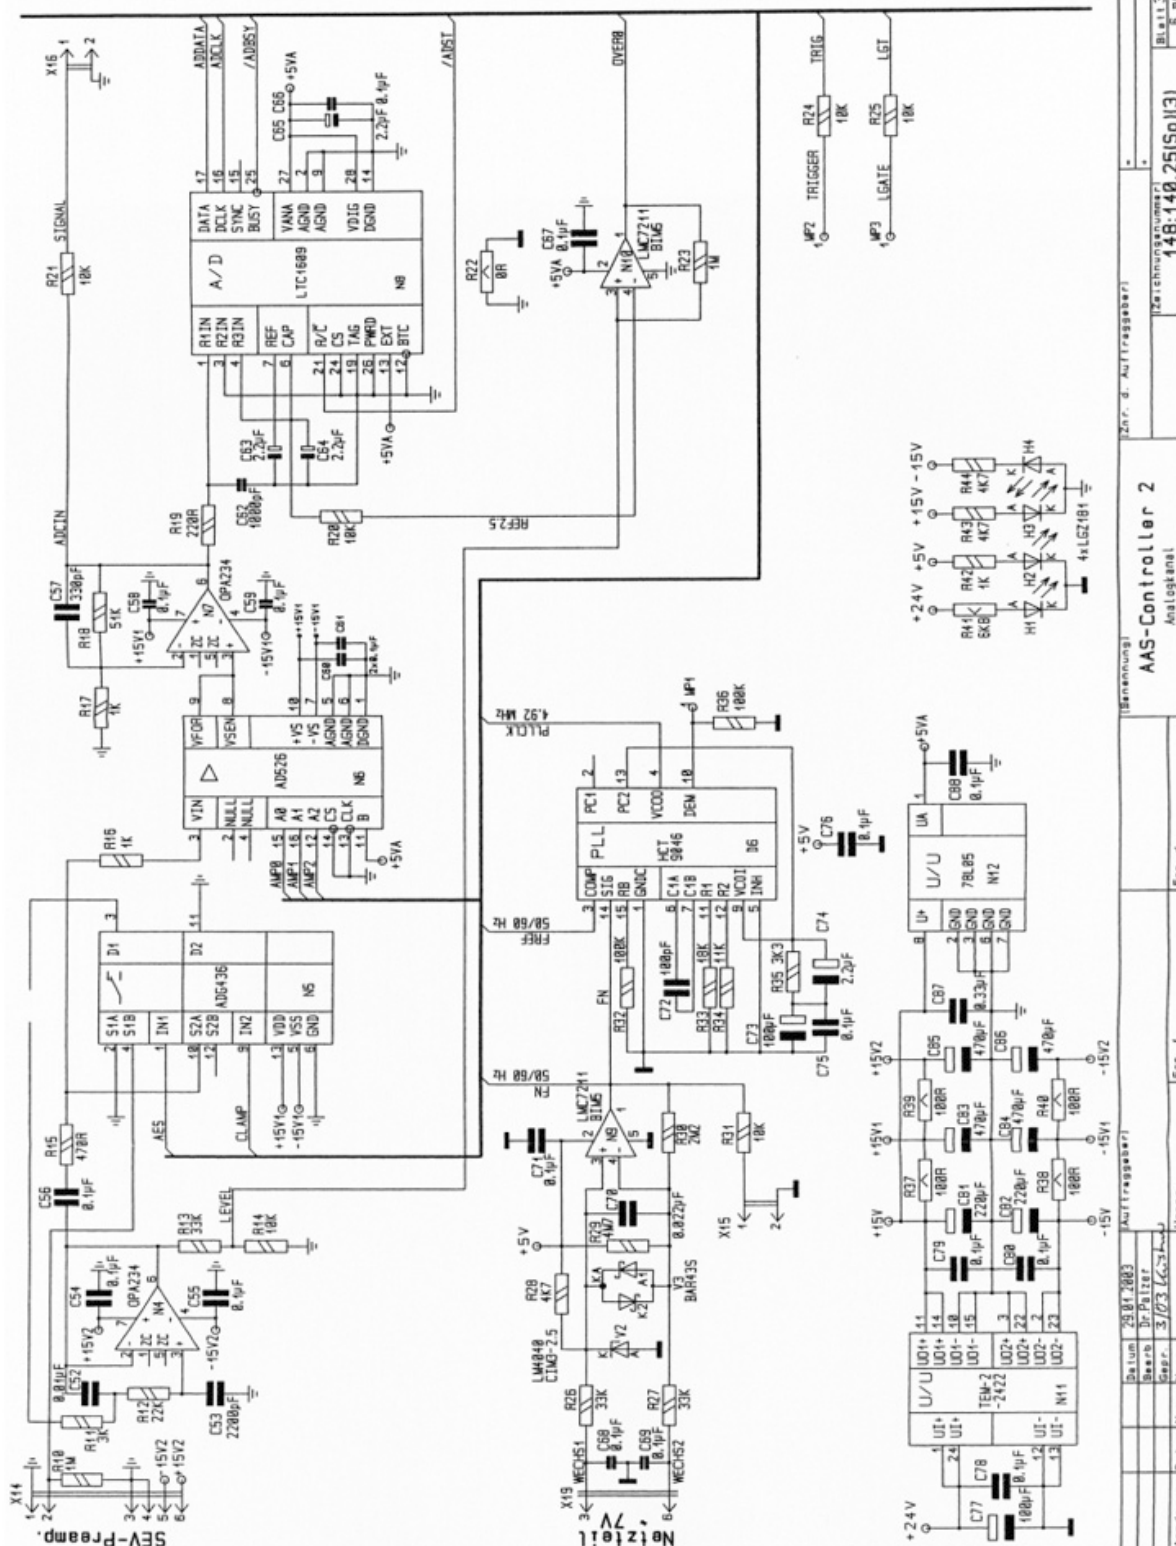

2 AAS Controller_Connection Diagram

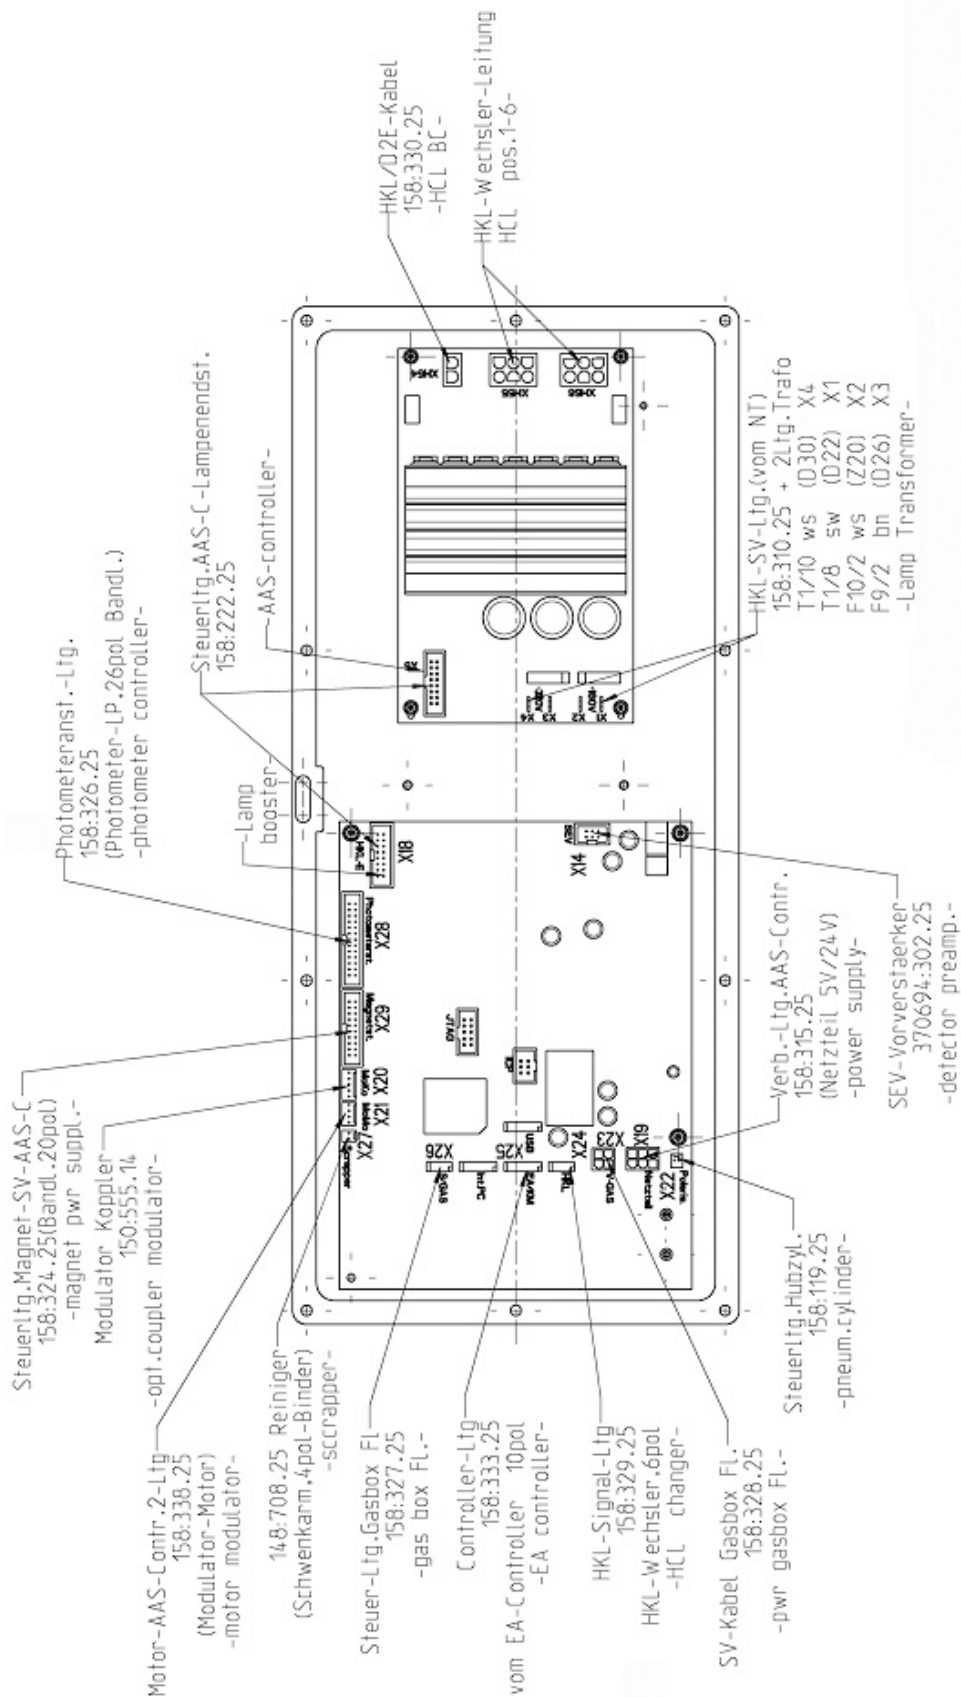


4 AAS controller_interface_148_140_25

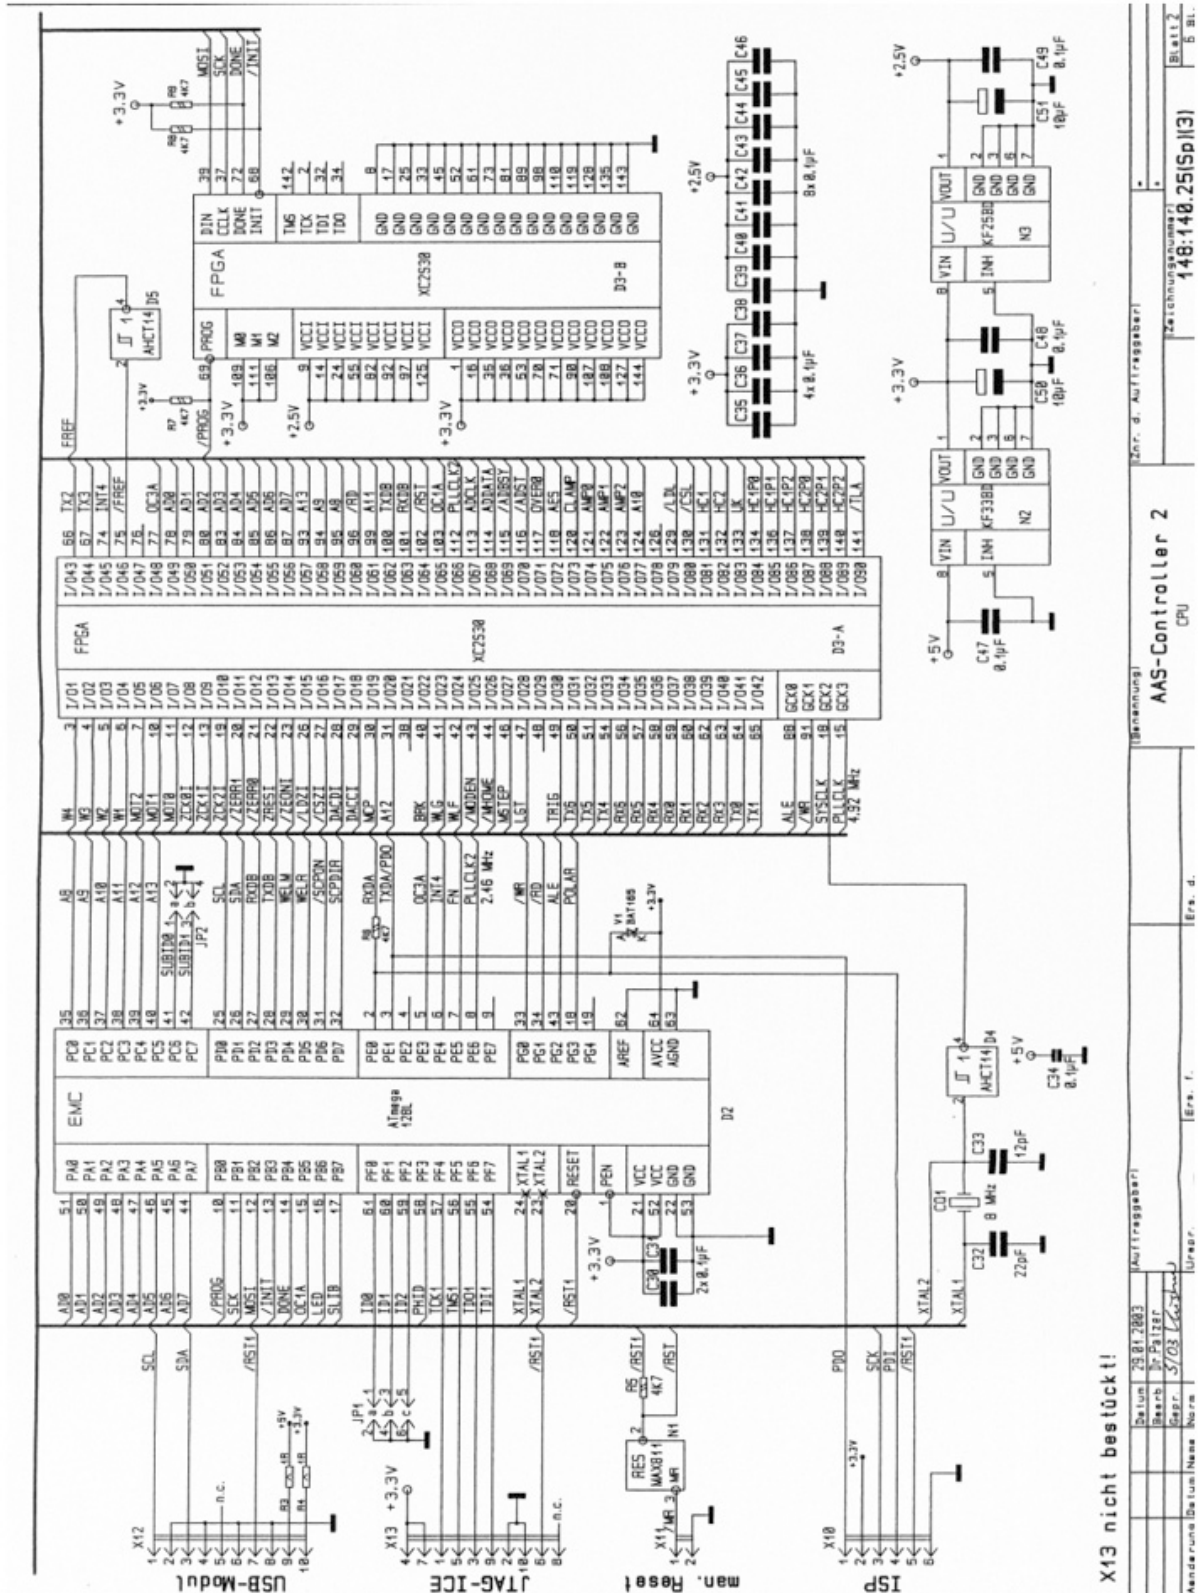


X13 nicht bestückt!

6 AAS controller_modulator-connectors_148_140_25

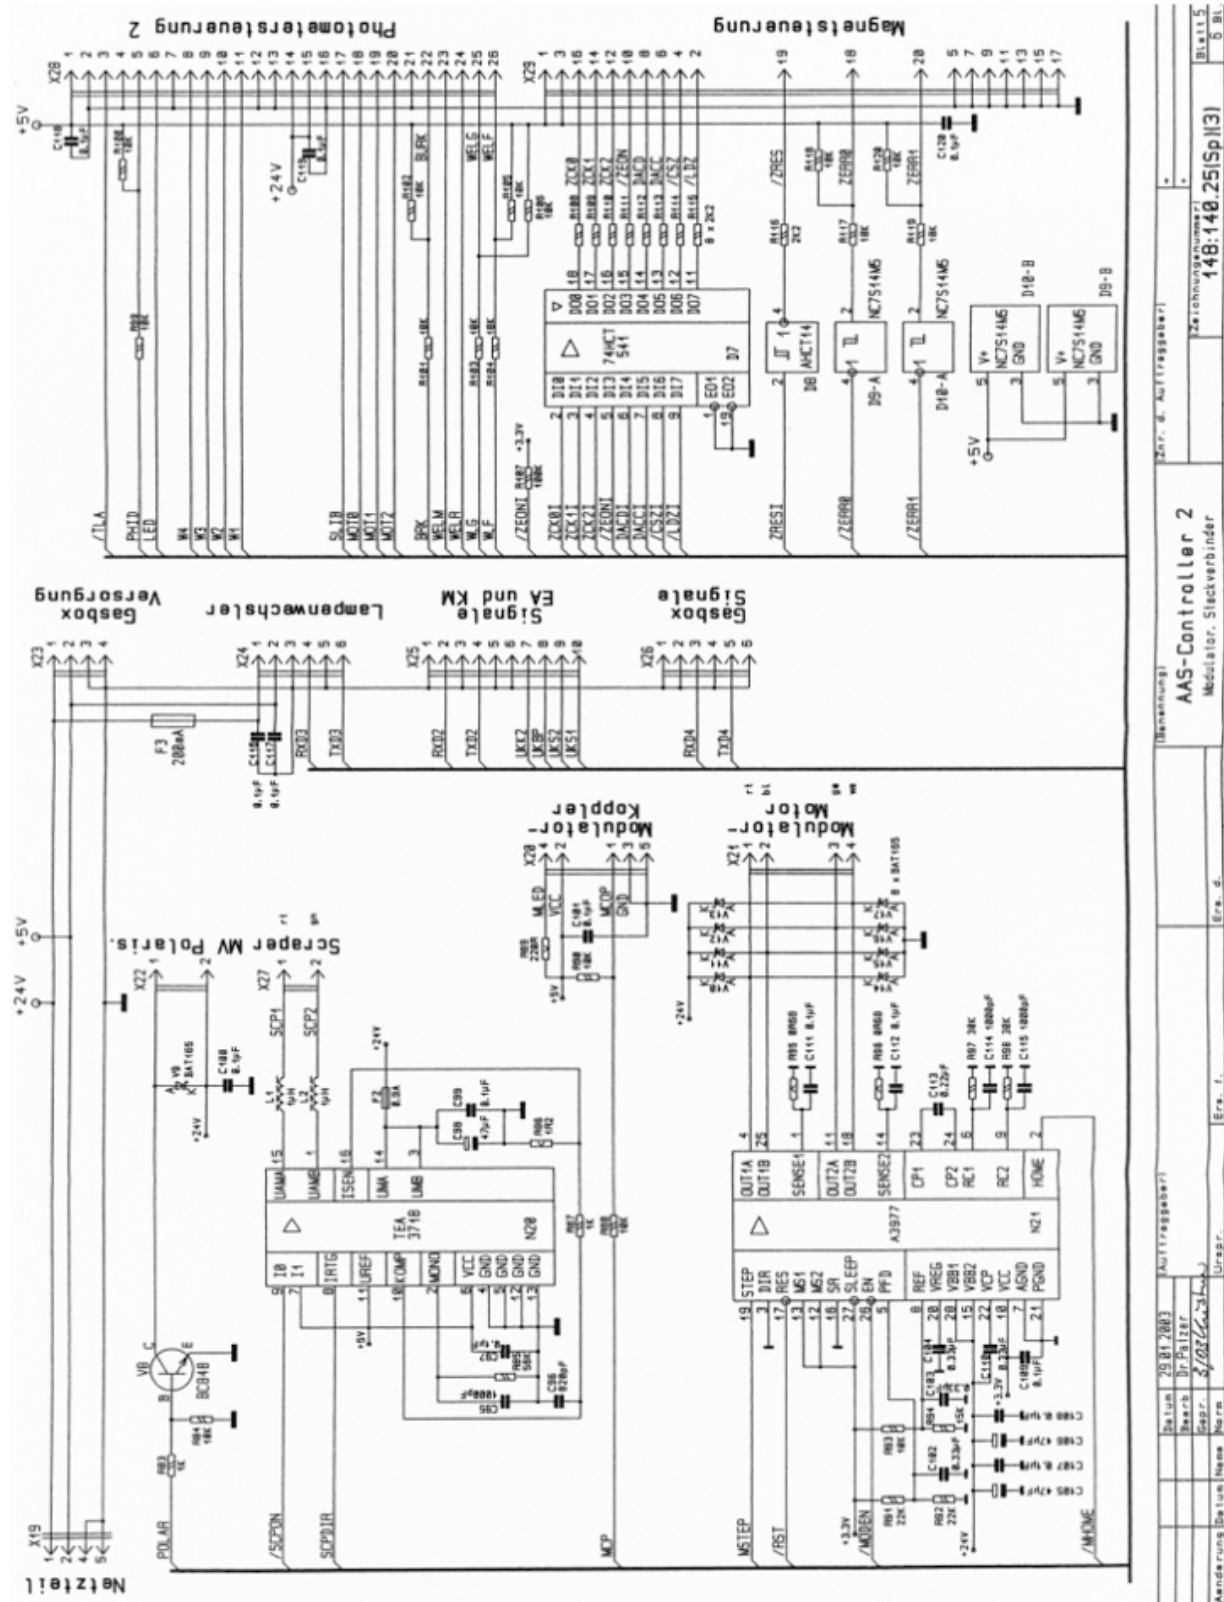

7 AAS controller_transverter_148_140_25

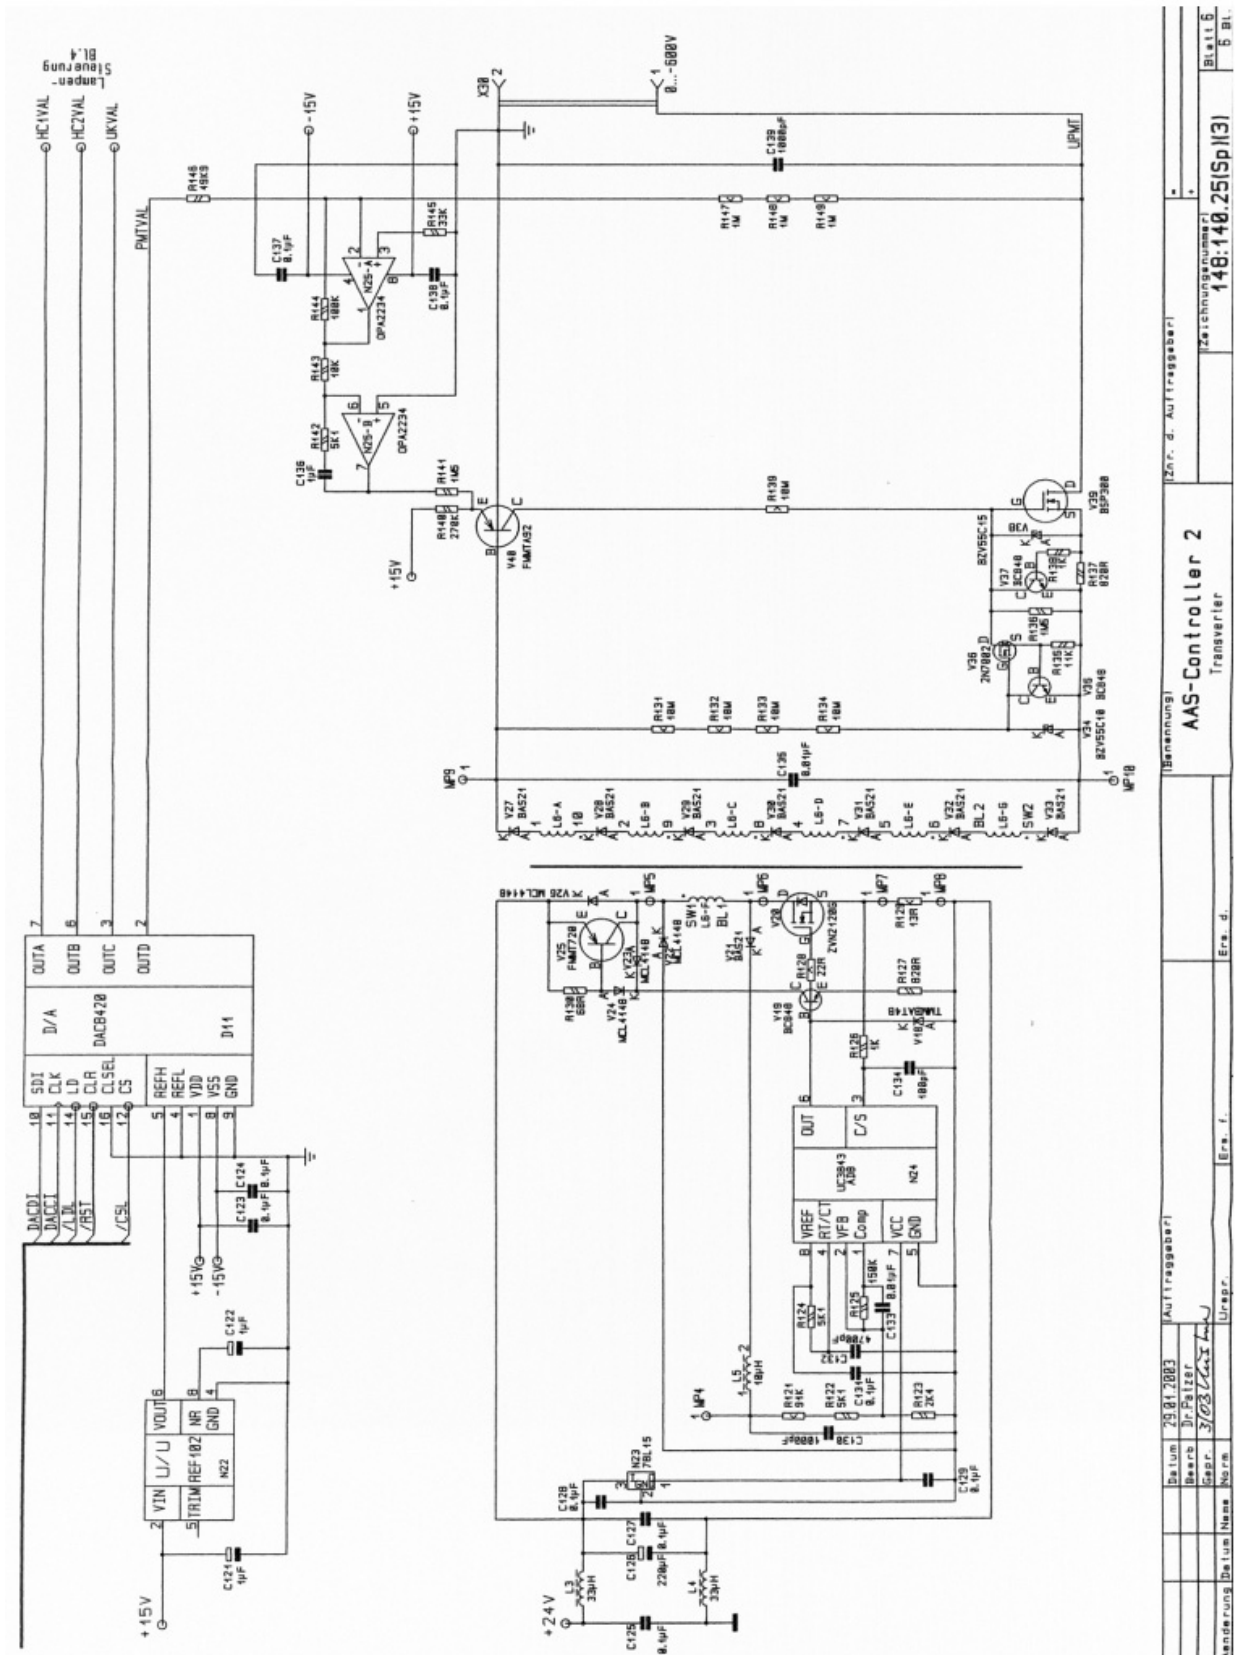

9 EA controller_circuit diagram_sheet2_158_065_25

